INSTALLATION INSTRUCTIONS 325 / 326 OUTSIDE ACCESS DEVICE

NOTES ON INSTALLATION

THIS OUTSIDE ACCESS DEVICE (OAD) PROVIDES LEVER / KNOB OPERATED LOCKING ENTRY WITH MASTER KEYING FACILITY. THIS DEVICE IS SUITABLE FOR USE ON DOORS TOGETHER WITH **EXIDOR 200/300 SERIES** PANIC & EMERGENCY EXIT HARDWARE.

THIS DEVICE ALWAYS ALLOWS IMMEDIATE EXIT VIA THE PANIC / EMERGENCY EXIT HARDWARE REGARDLESS OF WHETHER THE OUTSIDE ACCESS DEVICE IS LOCKED OR UNLOCKED.

THIS DEVICE CAN BE FITTED AS PART OF THE INITIAL INSTALLATION OF THE PANIC / EMERGENCY EXIT HARDWARE OR RETROFITTED TO AN EXISTING INSTALLATION.

FOR DOUBLE DOOR INSTALLATIONS WITH REBATED MEETING STILES USED TOGETHER WITH DOUBLE DOOR PANIC / EMERGENCY EXIT SYSTEMS THE OAD MUST BE FITTED ON THE FIRST OPENING (LAST CLOSING) LEAF. BEFORE INSTALLATION CHECK THAT BOTH THE FRAME AND DOOR ARE IN GOOD CONDITION, NOT TWISTED AND FREE FROM BINDING. ENSURE; THE DOOR IS HUNG ON SUITABLE HINGES, OPENS SMOOTHLY AND CLOSES SQUARE INTO THE FRAME.

THIS EQUIPMENT <u>MUST</u> BE FITTED BY A COMPETENT INSTALLER. THESE INSTALLATION INSTRUCTIONS <u>MUST</u> BE SUPPLIED TO THE USER BY THE INSTALLER WHEN THE INSTALLATION IS COMPLETE. IF THESE INSTALLATION INSTRUCTIONS ARE DISREGARDED

NO RESPONSIBILITY CAN BE ACCEPTED BY THE MANUFACTURER.

OPERATION

TO UNLOCK THE DEVICE:

INSERT THE KEY, ROTATE CLOCKWISE ONE TURN AND REMOVE. THE LEVER / KNOB WILL NOW OPERATE THE INSTALLED PANIC / EMERGENCY EXIT DEVICE ON THE INSIDE OF THE DOOR.

TO LOCK THE DEVICE:

INSERT THE KEY, ROTATE ANTI-CLOCKWISE ONE TURN AND REMOVE. WHEN LOCKED THE OPERATION OF THE DEVICE IS DISENGAGED BUT THE LEVER / KNOB WILL MOVE FREELY.

PRODUCT OPTIONS

A2

PRODUCT CODE	OPERATING ELEMENT (LEVER / KNOB)	CYLINDER SUPPLIED & FITTED (YES / NO)	*KEY RETENTION OPTION
325EC	LEVER	YES	NO
325EA	LEVER	NO	NO
326EC	KNOB	YES	NO
326EA	KNOB	NO	NO
325EC/RK	LEVER	YES	YES
325EA/RK	LEVER	NO	YES
326EC/RK	KNOB	YES	YES
326EA/RK	KNOB	NO	YES

*KEY RETENTION PREVENTS THE KEY FROM BEING REMOVED WHEN DEVICE IS UNLOCKED.


LEVER VERSION (325) - LEVER HANDING & ASSEMBLY

- FIT THE LEVER'S STOP PIECE INTO THE CORRECT APERTURE, TO SUIT THE DOOR HANDING.

- LOCATE THE WASHER ONTO THE BODY'S BOSS 'CUPPED' SIDE DOWN (PLAIN SIDE UP)


- LOCATE THE LEVER ONTO THE SQUARE SHANK (IN BOSS) IN THE CORRECT ORIENTATION, TO SUIT THE DOOR HANDING.

- SECURE LEVER TO DEVICE WITH THE SUPPLIED CAP HEAD M4 x 35 SCREW, USING 3mm HEX KEY.

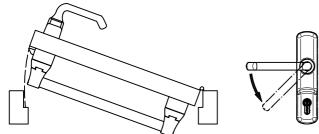

LH DOOR

(HINGED ON RIGHT, OPENING OUTWARDS, VIEWED FROM ABOVE)

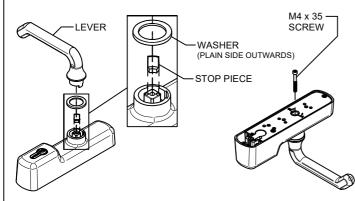


DEVICE PREPARATION



KNOB VERSION (326) - KNOB ASSEMBLY

- LOCATE THE **WASHER** ONTO THE BODY'S BOSS 'CUPPED' SIDE DOWN (PLAIN SIDE UP). - LOCATE THE **KNOB** ONTO THE SQUARE SHANK (IN BOSS). - USING 3mm HEX KEY SECURE WITH THE **M4 x 35 SCREW**.

THE KNOB ROTATES 45° IN EITHER DIRECTION TO A STOP, TO SUIT EITHER LEFT OR RIGHT HAND DOORS.

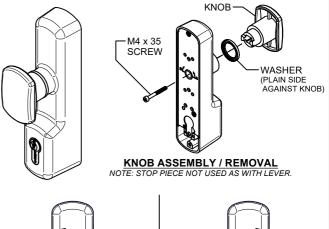







KNOB ACW ROTATION


KNOB CW ROTATION

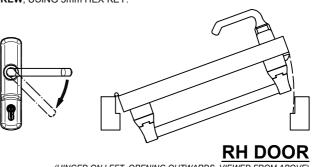

(HINGED ON LEFT, OPENING OUTWARDS, VIEWED FROM ABOVE)

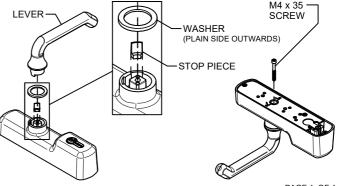

DEVICE PREPARATION

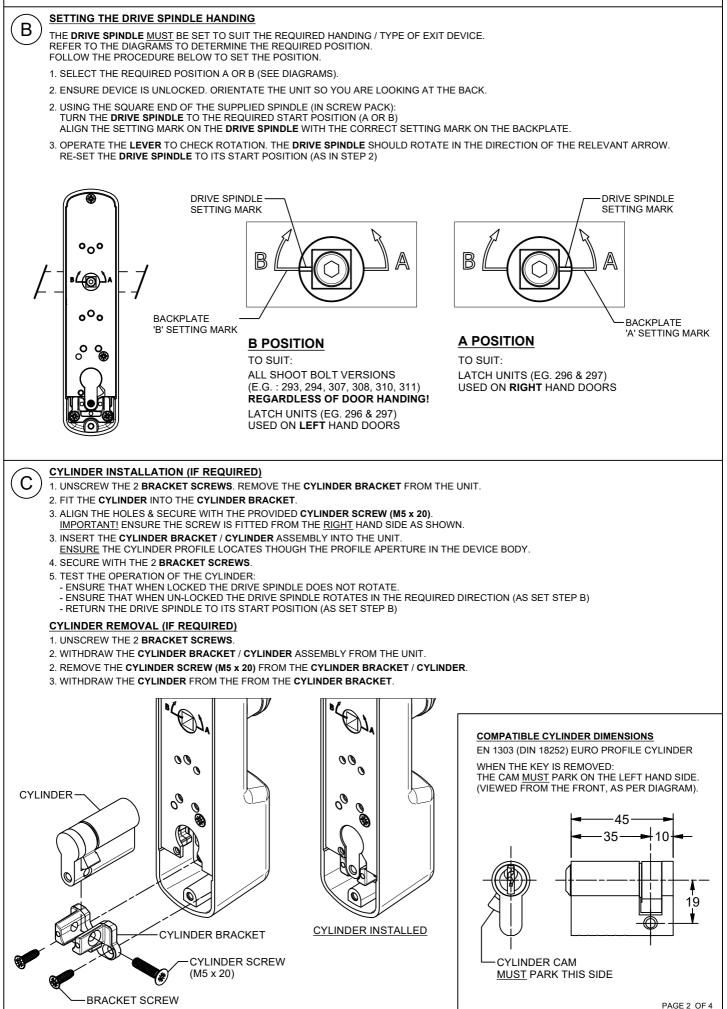

DEVICE INSTALLATION

