ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience



Please Note:

This document is provided as a dimensional reference and should not be printed as a drilling template unless it can be correctly scaled to 100% by your printer.

Door and latch preparation template

Important Note Drill hole from both sides of door to prevent splintering of door face.

Backset 60mm

Tools Required

- Ø54mm Hole saw
- Ø25mm Spade bit
- Ø2mm Drill bit
- Power drill
- 25mm Chisel
- Pencil
- Ruler or tape measure
- Phillips head screw driver

Mark hole position ready for drilling Ø54mm furniture hole.

old here on door edge


Tear along perforated line

Guide only


1-1-6-1

Find centre of door and mark ready for drilling Ø25mm latch hole.

Door preparation and latch installation (steps 1 - 9)

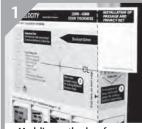


- · Mark line on the door face approx 900mm from the floor.
- Tear along perforated line.
- Fold page along --- dashed line and place on door edge.
- Align CL on template with marked line on door face.

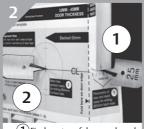

- (1) Find centre of door and mark ready for drilling Ø25mm
- (2) Mark hole position ready for drilling Ø54mm furniture hole both sides of door.



Drill Ø2mm pilot hole for the furniture both sides of door.

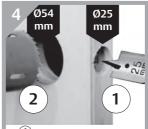

- $(\mathbf{1})$ Drill Ø25mm latch hole to depth of 80mm, ensure hole is drilled squarely.
- 2 Drill a Ø54 furniture hole, from both sides of door to prevent splintering.




- Insert latch into Ø25mm hole.
- Mark around latch face plate and chisel out recess
- Face plate must be flush with door face.



of the latch bolt facing in the direction that the door closes.



- PRIVACY LATCH ONLY
- To reverse the privacy latch bolt handing (for doors that open
- Remove the circlip and assemble to opposite side

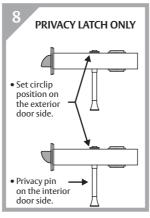



affix screws provided.

Fold here on door edge

LOCKWOOD GUARANTEE

ASSA ABLOY Australia Pty Limited ("ASSA ABLOY") warrants its Lockwood products against defects in workmanship and materials, subject to the limitations and exclusions set out in this Warranty. If, within the normal working life of a product, it is found to be defective, and none of the limitations and exclusions set out in this Warranty apply, ASSA ABLOY will supply the same or equivalent product free of charge. This is the only remedy granted by ASSA ABLOY under this Warranty. Limitations All electrical and electronic components used in ASSA ABLOY scange of products (excluding batteries) are guaranteed for a period of 12 months from the date of proof of purchase, unless stated otherwise. Exclusions This Warranty does not cover: 1. Damage to or malfunction or failure of the Lockwood product caused or contributed to by: (a) improper installation or failure to follow fitting instructions; (b) improper maintenance; (c) fair wear and tear; (d) any modification or repair which has not been authorized by ASSA ABLOY; (e) use of substitute or replacement parts or cylinders other than genuine ASSA ABLOY parts or cylinders; or (f) use of batteries other than those specified by ASSA ABLOY. 2. The cost of: (a) removal and/or replacement of the Lockwood product; (b) freight and/or travelling time; (c) replacement batteries; or (d) any modification or repairs to a Lockwood product, unless authorised by ASSA ABLOY. 3. Damage to or deterioration of the plated finishes Florentine Bronze, Architectural Bronze, Polished Brass, Gold and Satin Brass, which are classified as soft finishes, and are subject to deterioration under some environmental conditions. 4. Damage caused by corrosion when the Lockwood product is used in a corrosive environment. 5. Personal injury, property damage or economic loss, however caused.

1300 LOCK UP lockweb.com.au

Passage set installation (steps 10 -16), Privacy set installation (steps 10a - 21)



- PASSAGE SET Parts and assembly
- (Do not remove screws)



- PRIVACY SET Parts and assembly
- (Do not remove screws)



Position lever assembly (side with screws) so that it operates downward to retract the latch bolt.



- Align spindle into square opening in latch, screws pass through furniture hole.
- (Privacy set shown)



 Locate opposite lever (side without screws), align screw heads through large screw holes in furniture.



• Rotate rose furniture to align screws with countersunk holes



- Lightly tighten fixing screws
- · Check levers are horizontal
- Then fully tighten fixing



- Pass rose trim over lever
- · Push trim to secure.



- PRIVACY SET ONLY
- On the exterior side of door align emergency access holes on rose trim and



- PRIVACY SET ONLY
- Screw in the privacy button on the interior side of door through hole in rose trim.

*FOR OUTWARD **OPENING DOORS** REFER TO STEPS 7 & 8.



- PRIVACY SET ONLY
- Depressing the privacy button will lock the (exterior) outside lever.



- PRIVACY SET ONLY
- Rotate (interior) inside lever to release privacy lock.




- PRIVACY SET ONLY
- Insert and push pointed object to gain access from the outside (exterior) when the privacy mode is

Strike preparation and installation (steps 22 - 28)



- Partially close door
- Mark centre of latch bolt
- Mark horizontal line along the inside face of the door jamb.

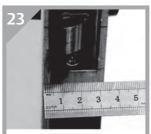

• Measure the door thickness and halve it.



 From the door stop along the horizontal line, measure and mark a vertical line at half the door thickness



At this point drill Ø25mm hole, 13mm deep into the door jamb.



- · Align strike plate centrally and vertically over this hole.
- Mark around plate
- Chisel out jamb to allow strike plate to sit flush.



• Drill 2x Ø2mm pilot holes and affix screws provided.



the tang by small increments

