
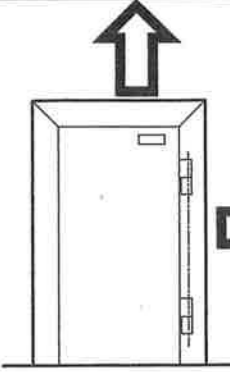
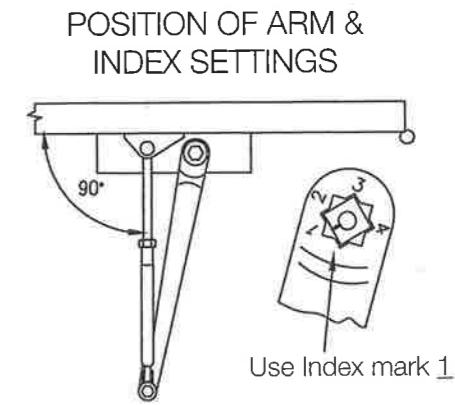


254 for 180° Maximum Opening
304 for 102° Maximum Opening


DOOR FRAME
TOP OF DOOR

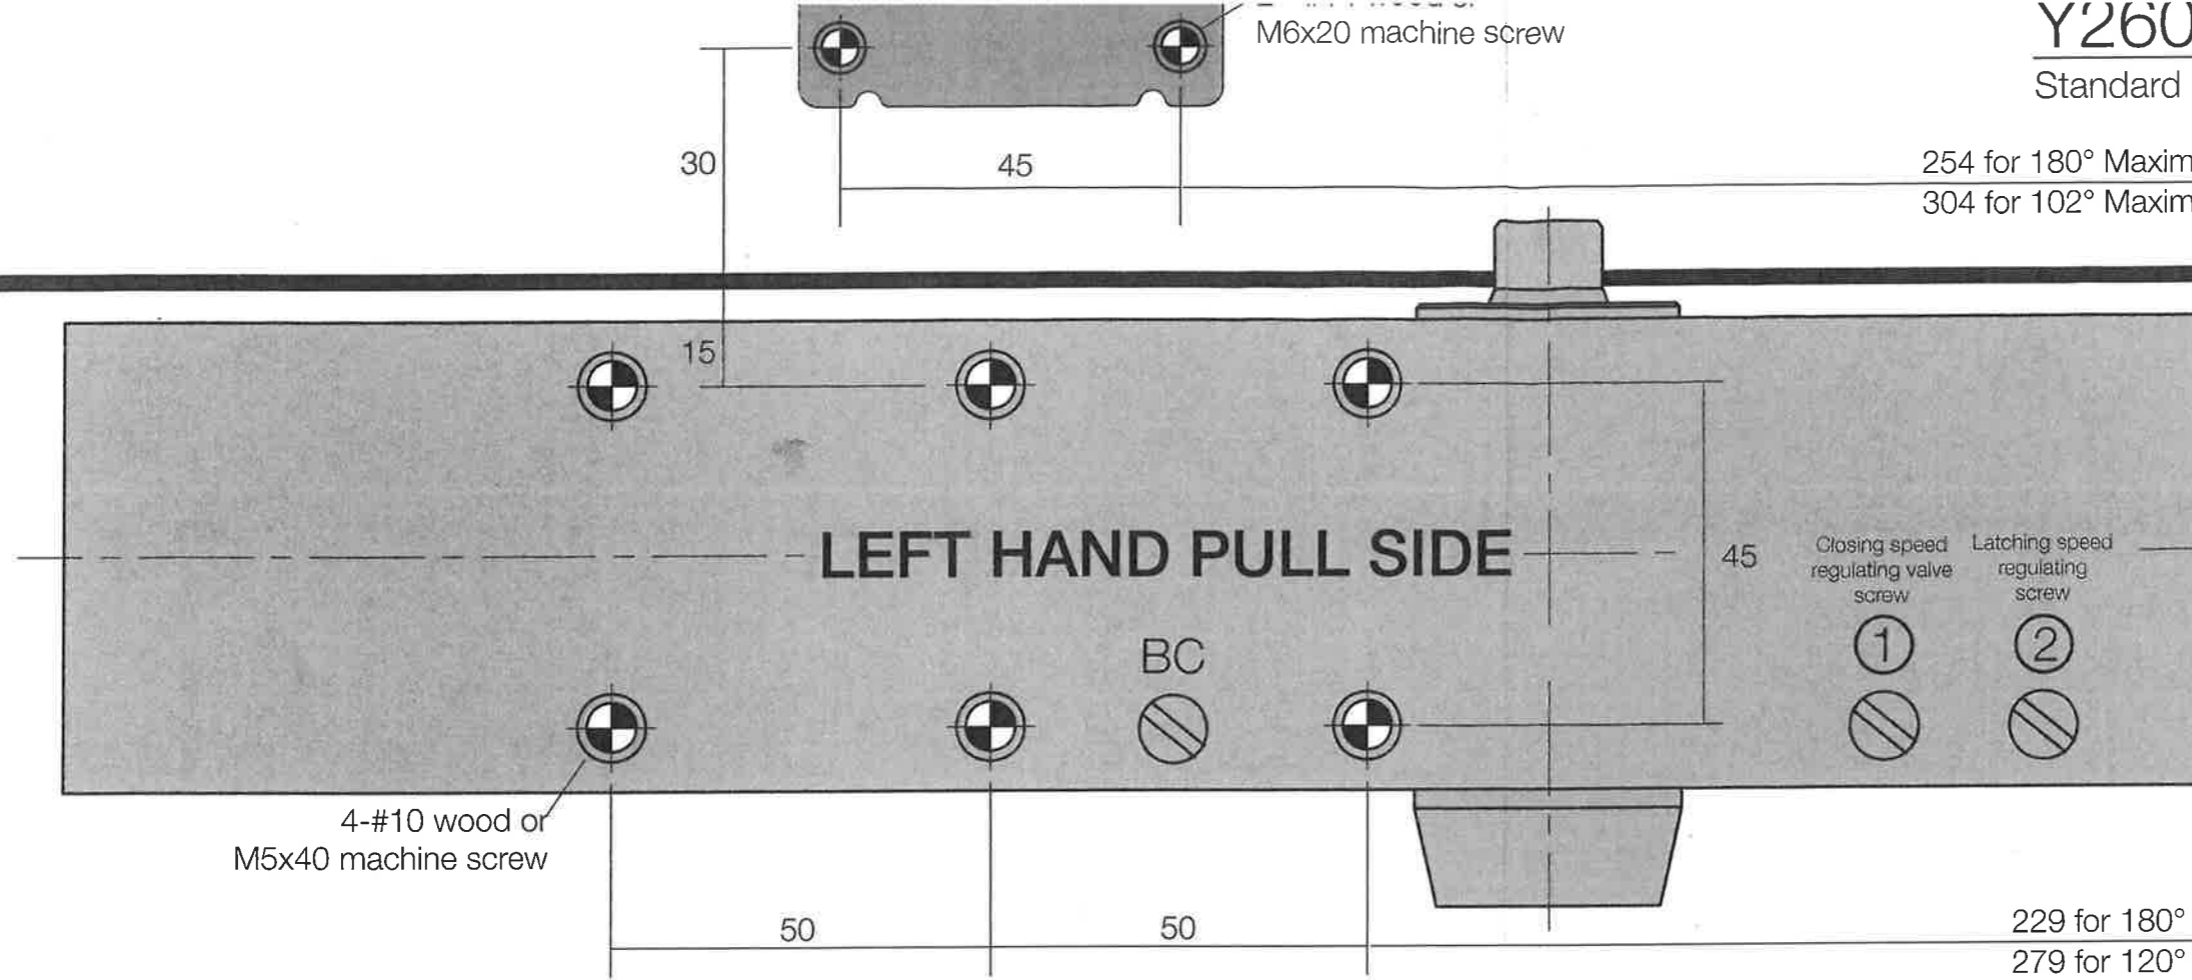


229 for 180° Maximum Opening
279 for 120° Maximum Opening

TOP JAMB INSTALLATION

Closer mounted on top jamb on PUSH side of door.
Reveals of 70 to 127mm requires longer connecting arm.
RIGHT HAND PUSH SIDE SHOWN

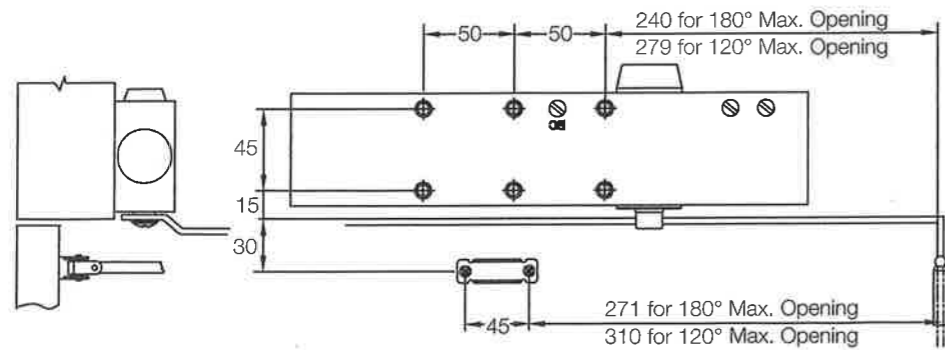


POSITION OF ARM & INDEX SETTINGS

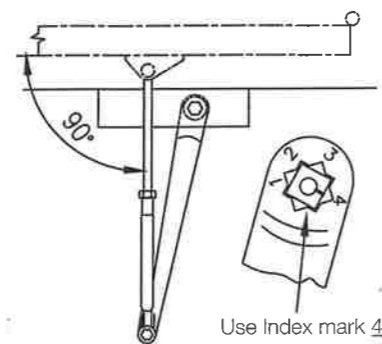


PARALLEL ARM INSTALLATION

Closer mounted on PUSH side of door.
RIGHT HAND PUSH SIDE SHOWN

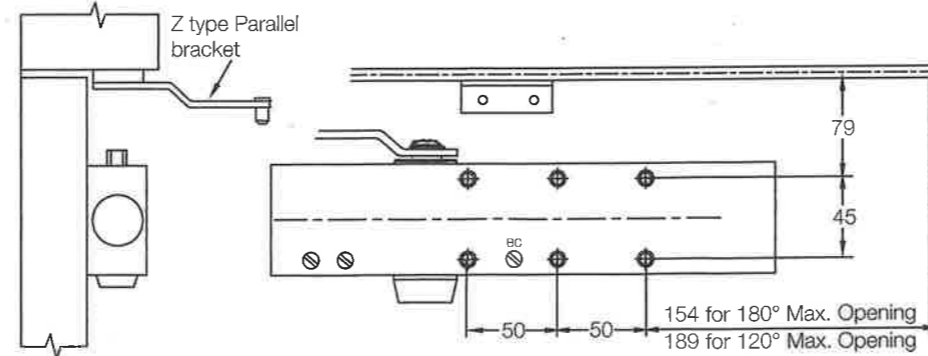

POSITION OF ARM & INDEX SETTINGS


Using a wrench on the square shaft on bottom of the closer, rotate the shaft approx. 45° towards the hinge edge of the door. Hold and place the main arm on the shaft on top of closer at the proper index mark as shown. Tighten the arm screw with the lockwasher securely.

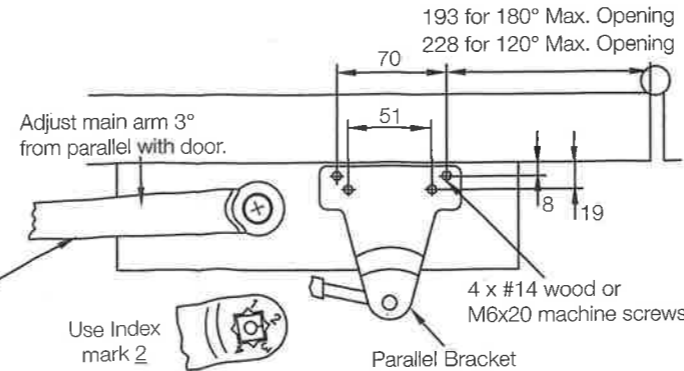

SPRING POWER AND VALVE ADJUSTMENT

- A. Regular Opening
- B. Closing Range 180° - 15°
- C. Latching Range 15° - 0°
- D. Backcheck Range 70° - 180°
- E. Delayed Action 180° - 70°

Adjustable Delayed action, clockwise turns increase delay time, counterclockwise turns decrease delay time.

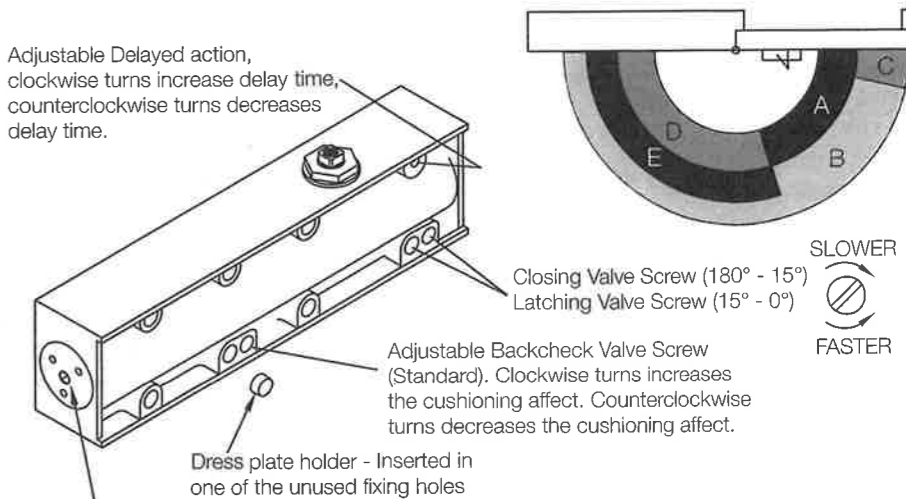

Power Adjustment Screw - Use 5mm Hexagon wrench provided. Clockwise turns increase the Closing Force, Counterclockwise turns decrease the Closing Force.

STANDARD AND TOP JAMB INSTALLATIONS			PARALLEL ARM INSTALLATIONS		
SIZE	No. of Turns	Direction	SIZE	No. of Turns	Direction
2	3	Counterclockwise	1	3	Counterclockwise
3	0	Factory Preset	2	0	Factory Preset
4	4	Clockwise	3	4	Clockwise
5	8	Clockwise	4	8	Clockwise
6	11	Clockwise	5	11	Clockwise



Y2600 Series Door Closer



Standard Installation Template Adjustable Size 2 - 6

254 for 180° Maximum Opening
304 for 102° Maximum Opening

DOOR FRAME

TOP OF DOOR


POSITION OF ARM & INDEX SETTINGS

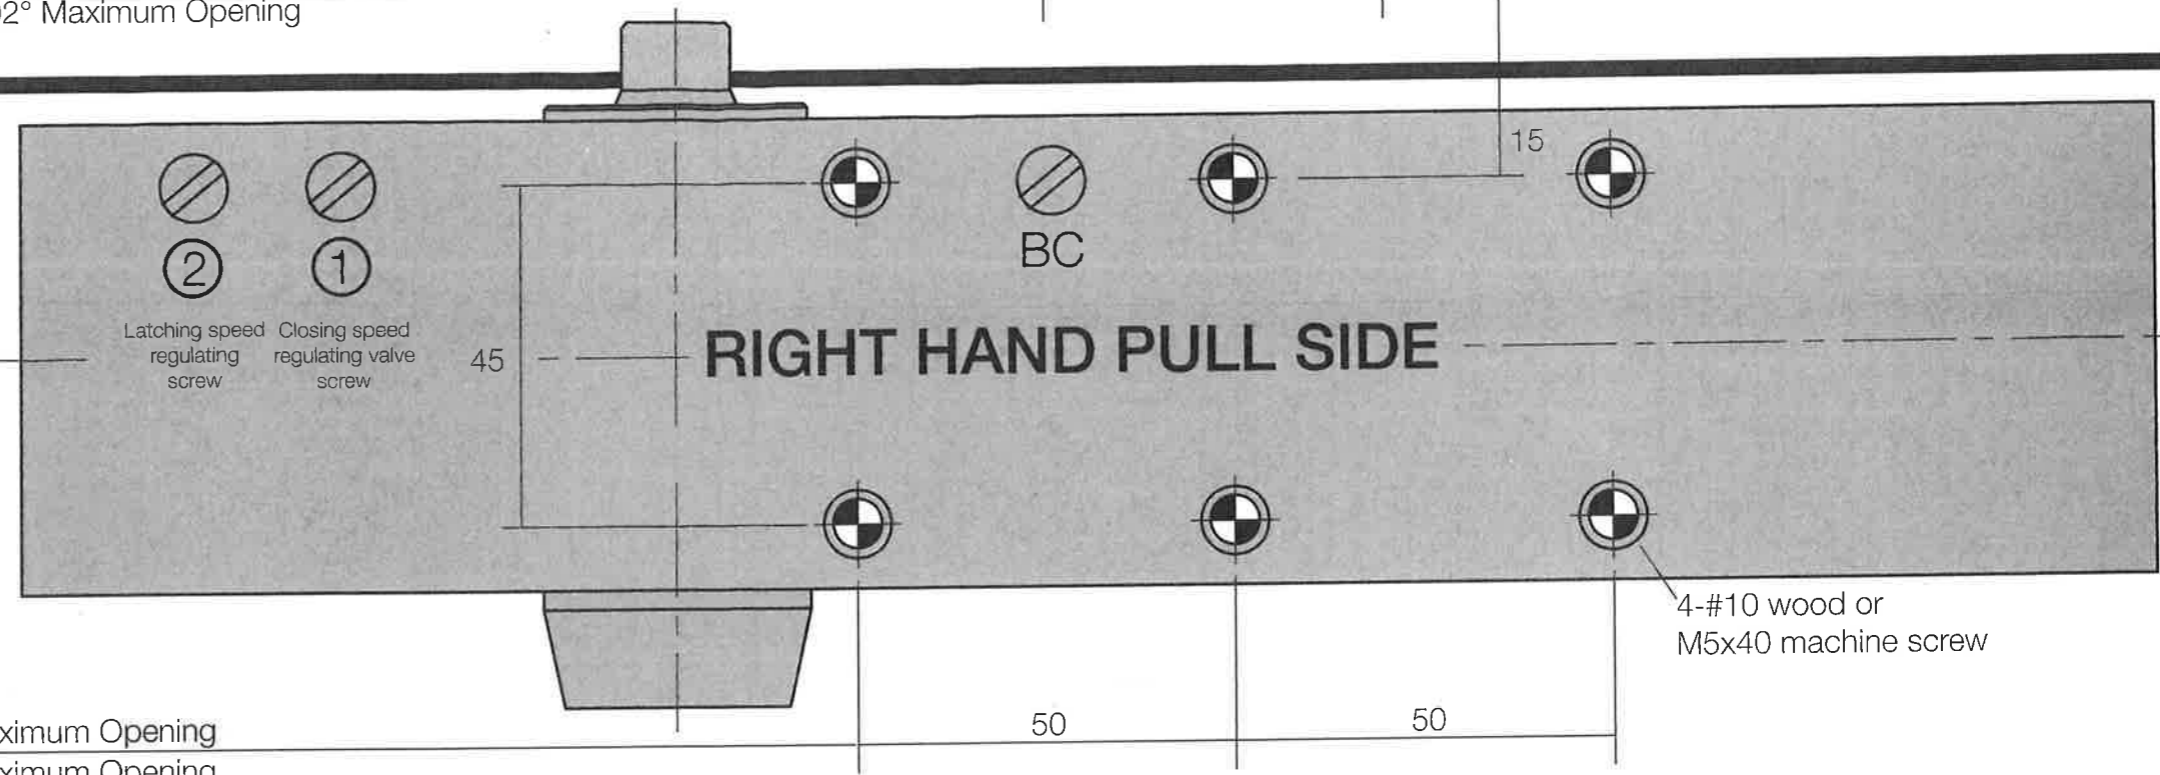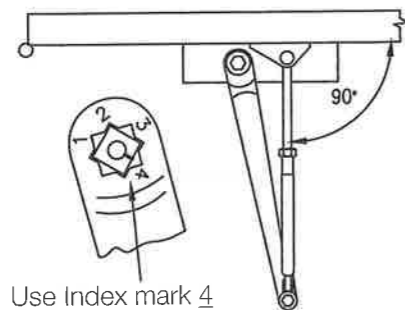


229 for 180° Maximum Opening
279 for 120° Maximum Opening

TOP JAMB INSTALLATION

Closer mounted on top jamb on PUSH side of door.
Reveals of 70 to 127mm requires longer connecting arm.
LEFT HAND PUSH SIDE SHOWN

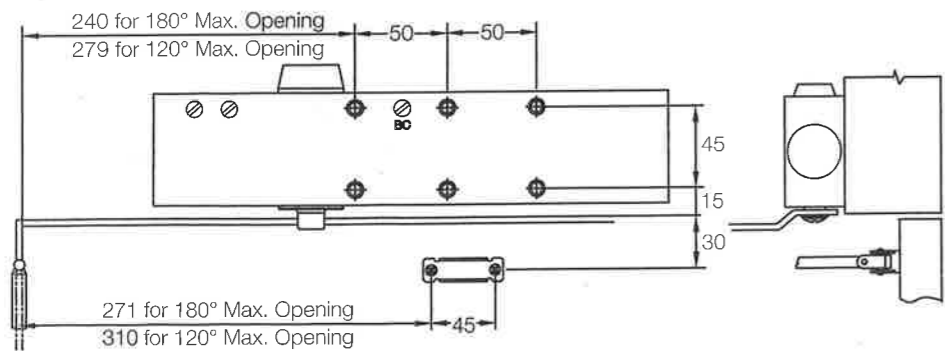


POSITION OF ARM & INDEX SETTINGS

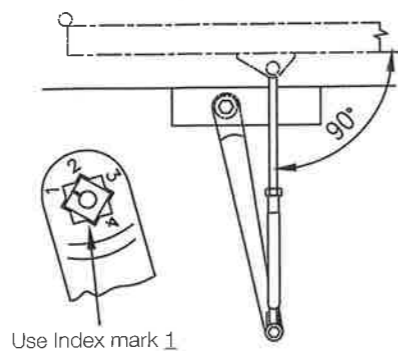


PARALLEL ARM INSTALLATION

Closer mounted on PUSH side of door.
LEFT HAND PUSH SIDE SHOWN

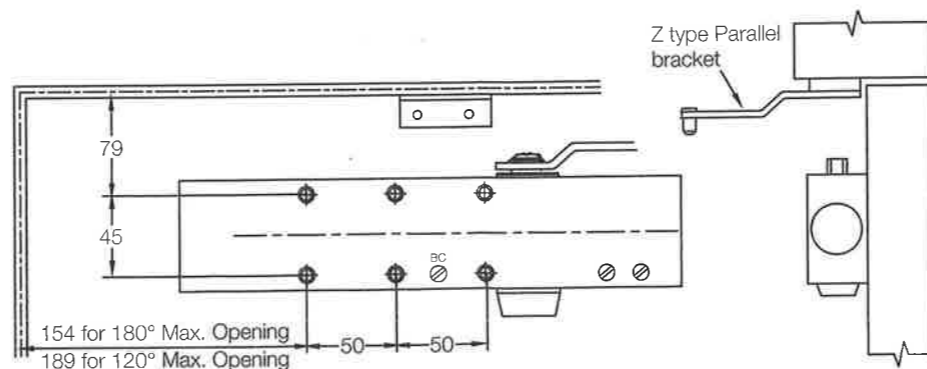


POSITION OF ARM & INDEX SETTINGS

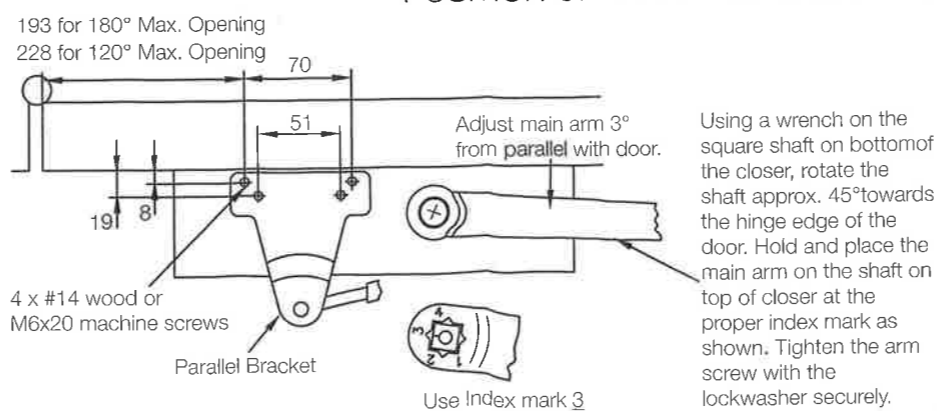


SPRING POWER AND VALVE ADJUSTMENT

- A. Regular Opening
- B. Closing Range 180° - 15°
- C. Latching Range 15° - 0°
- D. Backcheck Range 70° - 180°
- E. Delayed Action 180° - 70°

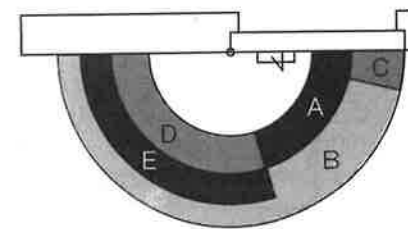

Adjustable Delayed action, clockwise turns increase delay time, counterclockwise turns decrease delay time.

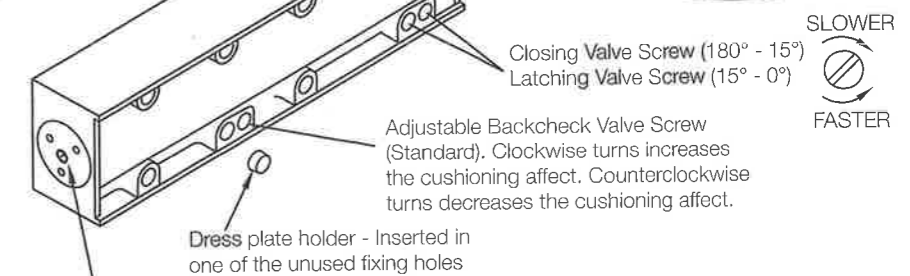

Power Adjustment Screw - Use 5mm Hexagon wrench provided. Clockwise turns increase the Closing Force, Counterclockwise turns decrease the Closing Force.

STANDARD AND TOP JAMB INSTALLATIONS			PARALLEL ARM INSTALLATIONS		
SIZE	No. of Turns	Direction	SIZE	No. of Turns	Direction
2	3	Counterclockwise	1	3	Counterclockwise
3	0	Factory Preset	2	0	Factory Preset
4	4	Clockwise	3	4	Clockwise
5	8	Clockwise	4	8	Clockwise
6	11	Clockwise	5	11	Clockwise