



Guardian Securistay

for timber awning windows


Guardian Securistay: for use with timber awning windows.

Application: Allows safer ventilation when house is occupied.


Operation:

Restricts window opening. Arm can be disengaged (only when window is closed) to allow wider window opening. When installed correctly, arm re-engages automatically when window is closed.

Components

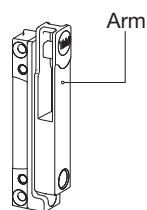

Base Assembly

 

Cover Assembly



Hook



Release Tool



Marking Template




Screw Pack

Fixing Instructions

1

Determine Guardian install height.
Measure window height and find appropriate install height using chart.
Mark height on window.

Window Height	Install Height
<600mm	200mm
600mm - 800mm	300mm
>800mm	400mm

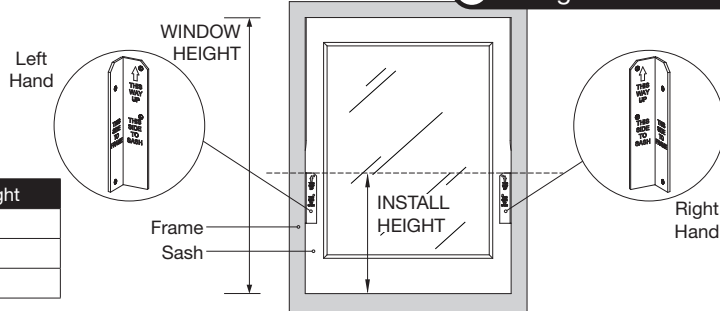


2

Drilling Guardian hole positions

- Align top of template with install height mark
- Mark holes in frame and sash
- Drill 2 x 3.2mm frame holes
- Drill 2 x 3.2mm sash holes



Template can be used for both left and right sides of windows.

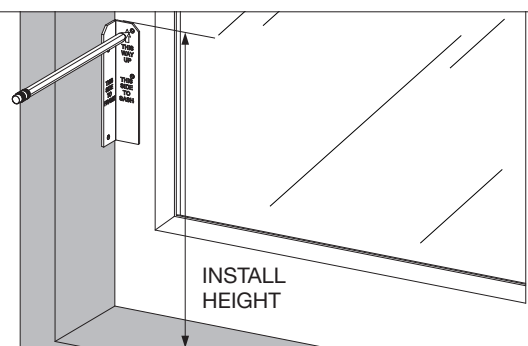

3

Attach hook to sash.


- Attach hook to sash using 2 x screws provided

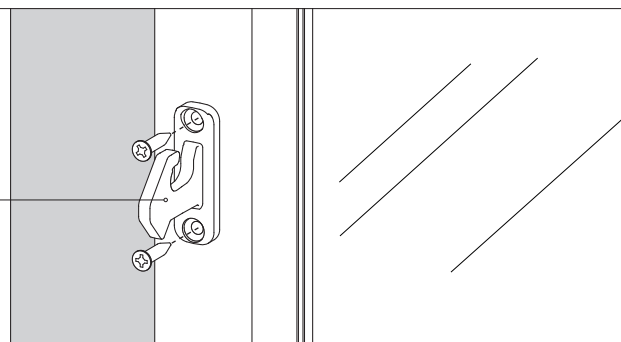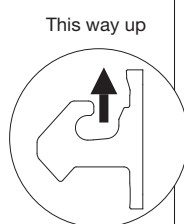

4

Attach base to frame.


- Open window slightly and hang arm over hook as shown
- Attach base to frame using 2 x screws provided

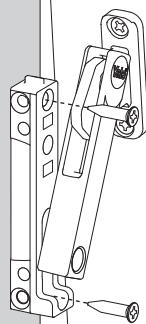


5

Clip cover on to base

- Cycle the window open and shut to check operation
- Open the window to maximum restricted position
- Line up the cover and base as shown and clip on the cover assembly.
Push cover firmly to clip in place

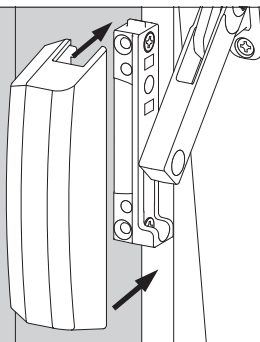

Releasing Restriction

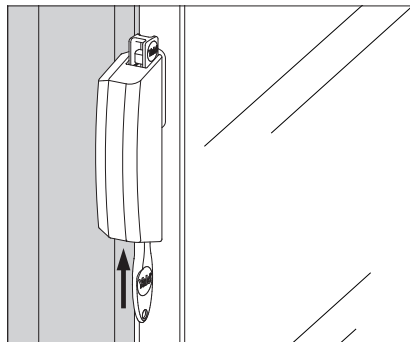


With the window fully closed, insert the release tool into the slot at the bottom of the Guardian Securistay and push firmly until the arm clips up in place.

The window can now be opened un-restricted.

Closing the window automatically re-engages the Guardian Securistay.

Removing Cover

VIEW FROM OUTSIDE

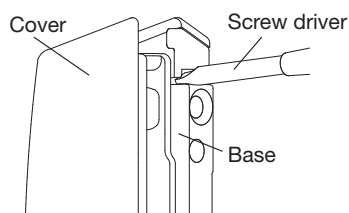

Care must be taken when removing the cover

- Release the restriction and fully open window to allow access to back of Guardian.
- Use a small flathead screwdriver or similar tool to release the top plastic cover clip (see image)
Gently remove the cover.

YALE WARRANTY

ASSA ABLOY New Zealand Ltd ("ASSA ABLOY") guarantees its Yale products against defects in workmanship and materials.

If within 10 years of purchase a product is found to be defective, ASSA ABLOY will supply the same or equivalent product free of charge.

ASSA ABLOY assumes no liability under the guarantee for the following:

1. Improper installation or failure to follow fitting instructions.
2. Failure due to improper maintenance.
3. Fair wear and tear.
4. Indirect or consequential loss or damage.
5. Cost of removal and/or replacement.
6. Cost of freight and/or travelling time.
7. Damage to or deterioration of plated finishes (soft finishes) or finishes exposed to a corrosive environment. As deterioration is possible under some environmental conditions.
8. Any modification or repairs to a product, as supplied, unless authorised by ASSA ABLOY.
9. Use of replacement parts other than authorised parts.
10. Malfunction or failure of the product due to the use of non-genuine ASSA ABLOY parts.

Nothing in the ASSA ABLOY New Zealand Limited Warranty excludes, restricts or modifies any condition, warranty, right or liability implied or protected by law where to do so would render the Warranty, or any part of it, void.

10
YEAR
WARRANTY