Yale Smart Safe Installation Instructions

 
Download the Yale Home App

Create an account



Yale Home


Unlock Safe Using Key



Open door and leave open until setup is complete.

Tip: When key is used to unlock, it must be used to lock.

 Insert Batteries



Open the battery compartment and insert 4 AA batteries. Reinstall the cover.

Add Safe to the Yale Home App

Set up Smart Safe

Tap "Set up a device" from the app menu. When asked, scan the Yale QR code on the inside of your safe door.




Tip: Once batteries are inserted, you have 5 minutes to complete this step. If your app doesn't find the safe, press and hold (5 secs) the reset button on the inside of the safe door until a buzzer is heard. After the buzzer, remove one of the batteries and re-insert it. Repeat step 4.

5 Create Entry Codes



Once added to the Yale Home App, you can create and delete entry codes or share app access by tapping the Guest icon in the bottom menu.

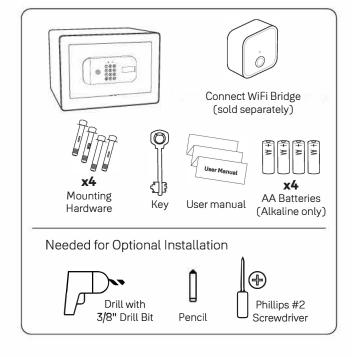

Set up with Connect WiFi Bridge*

Note serial number located on back of Bridge. Plug Connect WiFi Bridge into an INDOOR outlet within 3 meters of the Smart Safe.




Tip: For best connectivity, make sure that the Connect WiFi Bridge is in the line of sight of the front of the safe.

*Connect WiFi Bridge sold separately

0


Mount Safe For Added Security (Optional)

There are 8 mounting hole locations on the Smart Safe. Use included mounting template for guidance to secure the safe to the wall, shelf or floor.

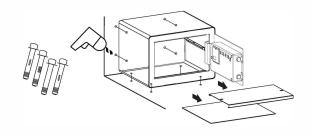

Using Your Smart Safe

Outside

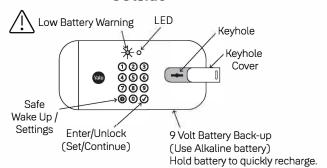




Safe can always be opened with the key or with a 9V battery and valid code.



Settings Definitions

Setting	Default	Definition
Vacation Mode	Off	While in Vacation Mode, the safe will not open even when a valid Entry Code is entered. This setting can be changed from the Yale Home App.
Inside Light	On This feature cannot be turned off.	The inside light will automatically turn on and stay on for 10 seconds when the safe door is opened.
One Touch Locking	On This setting cannot be turned off.	Touching any key on keypad will lock the safe.
Sound	On	The sound setting for entry code verification can be set from the Yale Home App.

Inside

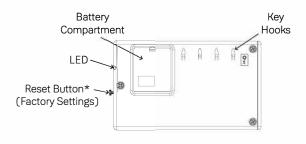

* When safe is paired to app, Factory Reset must be done from app. During a factory reset the safe will be unlocked.





Tip: If the safe is to be used without pairing to the Yale Home App, please scan the QR code below and refer to the 'Can I use the Smart Safe as a standalone setup?' section in the Product Support section on our webpage for details.





Warning: Changes or modifications to this device, not expressly approved by Yale Home could void the user's authority to operate the equipment.

Yale Home

New Zealand Product Support nzsales@assaabloy.com • www.yalehome.com/nz



R-N7

Yale® is a registered trademark of Yale Home. Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Other products' brand names may be trademarks or registered trademarks of their respective owners and are mentioned for reference purposes only. © Copyright 2023. All rights reserved. Reproduction in whole or in part without the express written permission of Yale Home is prohibited.

YALE, with its unique global reach and range of products, is the world's favourite lock - the preferred solution for securing your home, family and personal belongings.

ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience.

Trusted every day

