


COMPACT 120 LOW HEADROOM KIT

HENDERSON

FITTING INSTRUCTIONS

TOOLS REQUIRED

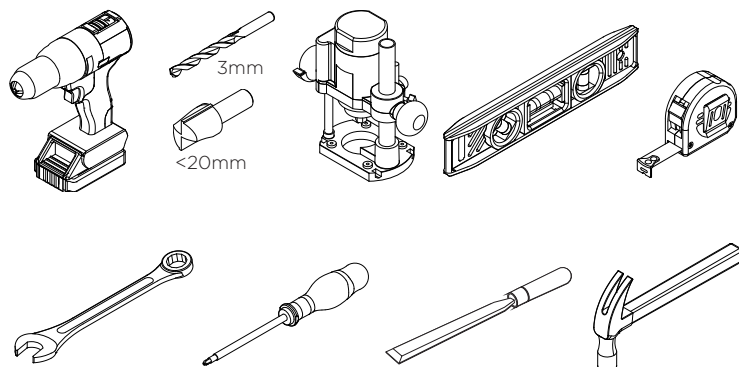

KIT AND DOOR SPECIFICATION


Kit Short Code

CP120



120kg

KIT CONTENTS

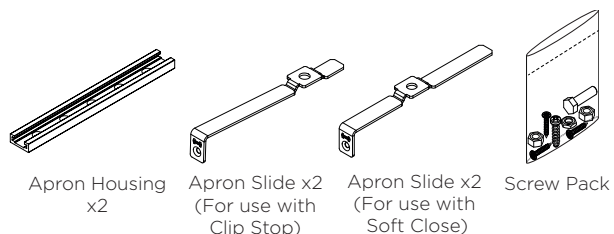


NOTE: APRON HOUSING REPLACES APRON PLATE INSTALLATION STEPS.
(COMPATIBLE WITH HUSKY 120 PRO AND SOLTAIRE 120 SLIDING DOOR HARDWARE)


1

SET TRACK HEIGHT AS PER BELOW.
FOLLOW BASE KIT INSTRUCTIONS FOR TRACK FITTING.

Husky 120 Pro Kit

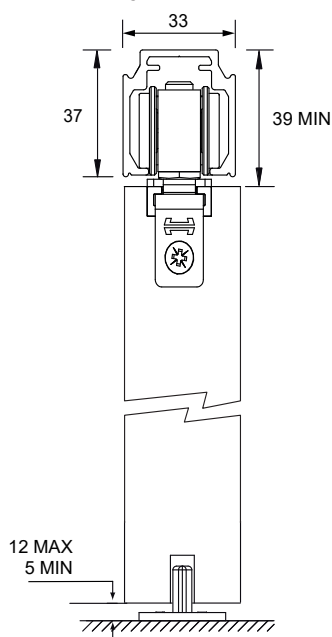


Soltaire 120 Kit

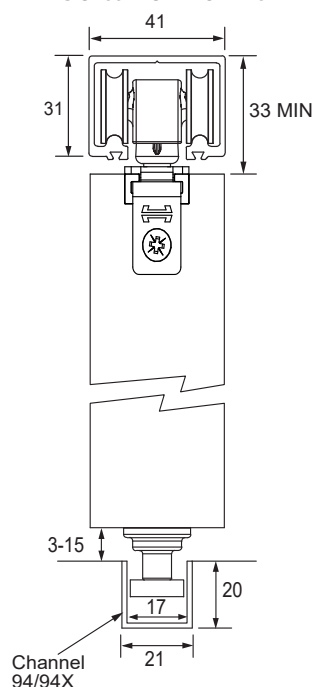


2

ROUTE TOP OF DOOR AT BOTH ENDS.

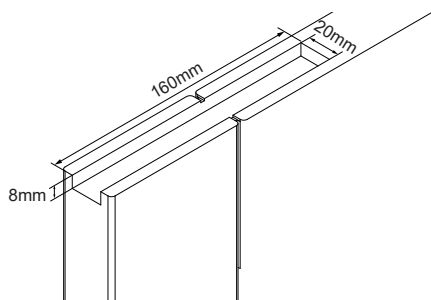


3


FIX APRON HOUSING TO DOOR WITH SCREWS PROVIDED.

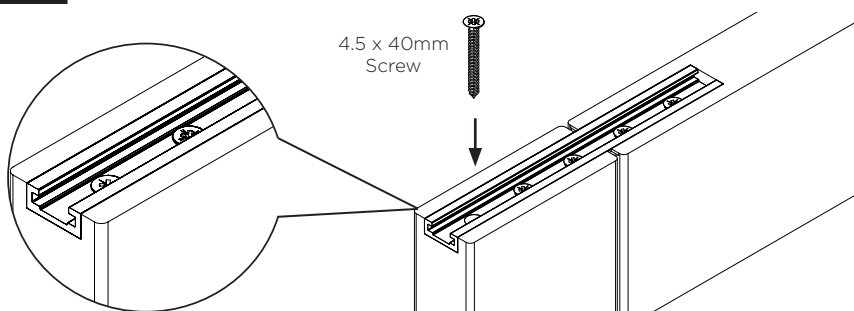

4 IDENTIFY WHICH SLIDE IS REQUIRED.

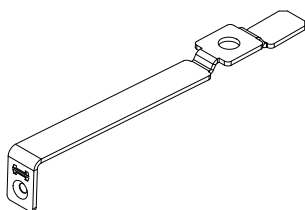


For use with Clip Stop

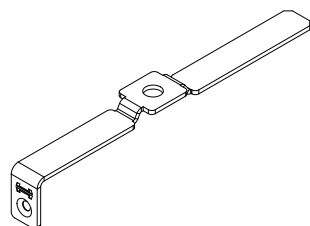


For use with Soft Close
(Min. door width 610mm)

5 ASSEMBLE HANGERS TO THE SLIDE USING BOLTS AND NUTS PROVIDED.

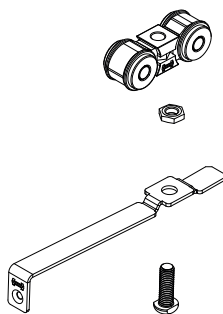


Husky 120 Pro Kit

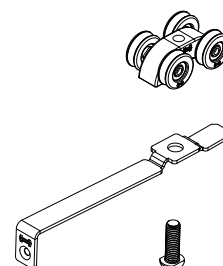


Soltaire 120 Kit

Please Note: for the purpose of visualisation, the apron slide for use with a clip stop is shown.


6 ENSURE BOLT HEAD FLATS ARE PARALLEL TO THE SLIDE HORIZONTALS AS SHOWN BELOW.

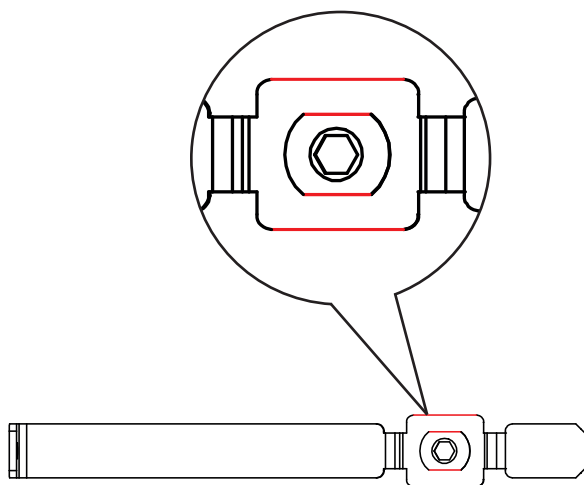

7 FIX APRON SLIDES TO DOOR BY SLIDING INTO APRON HOUSING. SECURE WITH SCREWS PROVIDED, ONCE IN POSITION.

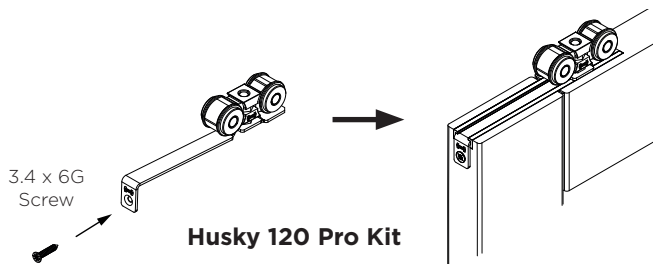

Husky 120 Pro Kit

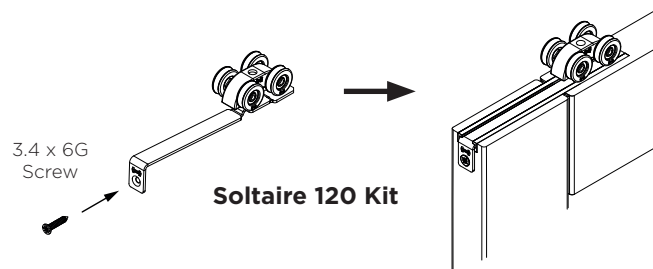

Soltaire 120 Kit

Please Note: for the purpose of visualisation, the apron slide for use with a clip stop is shown.

P C HENDERSON LTD

Durham Road, Bowburn,
Co. Durham,
DH6 5NG

UK SALES

t: +44 (0) 191 377 7345
e: sales@pchenderson.com
w: www.pchenderson.com

IRELAND SALES

t: +353 (0)1 643 6816
e: sales@pchenderson.ie
w: www.pchenderson.com

INTERNATIONAL SALES

t: +44 (0) 191 377 7346
e: international@pchenderson.com
w: export.pchenderson.com

370883

REV 01

Sep-23