


Tools Required:


- Drill bit
- Rivet gun *or* screwdriver
- Safety goggles

Fixing Instructions:

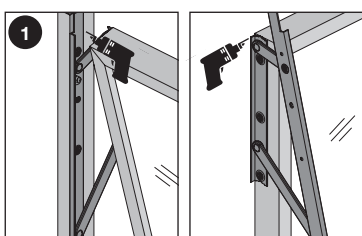


Preparing the Window

- Remove screws / drill rivets from frame side of stay
- Remove sash from frame
- Remove screws / drill rivets from sash side of stay

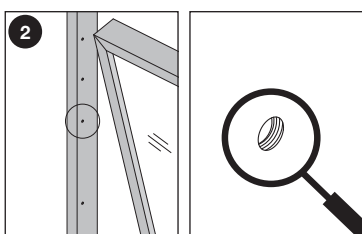

Check Condition

- If using screws, check condition of all screw holes
- If screws do not tighten in holes, rivets must be used

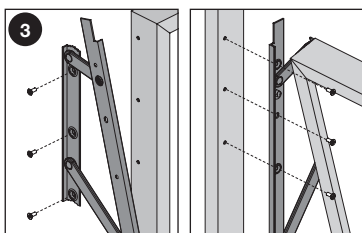

Install New Stays

- Screw / rivet new stay to sash using existing holes
- Lift sash into position in frame
- Screw / rivet new stay to frame using existing holes

FIXING SCREWS OR RIVETS ARE NOT INCLUDED IN THE PACK AS SIZE WILL VARY TO SUIT JOINERY



ASSA ABLOY New Zealand Limited
6 Armstrong Road, Albany,
Auckland 0632, New Zealand
www.assaabloy.co.nz
For customer feedback: info.nz@assaabloy.co.nz

Q13020_0915-1