










REBATE KIT

PROFESSIONAL SERIES

TOOLS REQUIRED

-  3mm drill bit
-  25mm spade bit
-  Drill
-  Pozi screwdriver
-  Hammer
-  Chisel
-  Safety goggles

CONTENTS

- 1 x Rebate block
- 1 x Strike reinforcer
- 2 x 8g x38mm countersunk screws
- 2 x 6g x38mm countersunk screws

FEATURES

Allows key and knob locksets and deadbolts to be adapted for use on rebated double doors with a rebate of 10-12mm

MC307SC



REBATE KIT

FOR KNOB LOCKSETS
AND DEADBOLTS

PROFESSIONAL
SERIES

REBATE DOOR KIT

Suitable for timber



Suitable for
french doors



Easy
install



Instructions
included

MC307SC
Q25070 1117



9 414553 1200069

ASSA ABLOY New Zealand
6 Armstrong Road, Albany,
Auckland 0632, New Zealand

Quality, ISO 9001
Environmental, ISO 14001

For customer feedback:
nzsales@assaabloy.com



PLEASE
RECYCLE



The world's favourite lock
www.yalelock.co.nz

An ASSA ABLOY Group brand

ASSA ABLOY





Rebate Kit


Rebated Door Kit

Rebate Kit MC307: For most Key n Knob locksets and Deadbolts to suit double wooden doors with 10-12mm rebates

Application: Allows Yale and most Key n Knob locksets and Deadbolts to be adapted for use on rebated double doors with a rebate of 10-20mm by using the MC307 Rebate Kit.

Installation Notes:


With rebated double doors the **INACTIVE** door is the leaf that closes first. This door is usually secured by bolts top and bottom. For a secure application use MC82 Patiobolts. The **ACTIVE** door closes onto the **INACTIVE** door and has the lockset fitted to it.

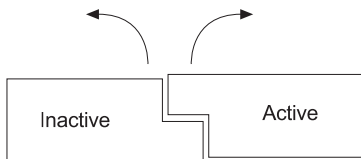

1

Setting Out

- Follow the lock instructions locating the lock template on the leading edge of the **ACTIVE** door

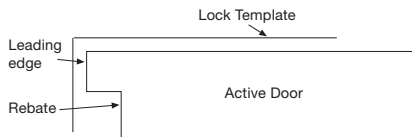

2

Door preparation


- Transfer the lock centre line to edge of the **INACTIVE** door
- Position the strike plate supplied with lockset on the centre line and mark the outline
- Cut away the timber to a depth that will take the rebate block and strike reinforcer so that it is flush with leading edge of door
- Drill 25mm diameter bolt hole as detailed in the lock fitting instructions

Fixing Instructions

3

Fitting strike plate


- Check out for the strike plate and fit using strike plate screws provided in lockset screw pack. Drill 3mm diameter pilot holes to suit
- Fit strike reinforcer using 6g x 25mm screws provided

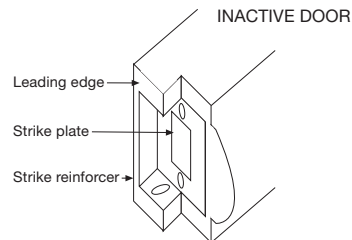


4

Fitting latch bolt assembly

- Place the latch bolt assembly through the rebate block and insert in the bolt hole the **ACTIVE** leaf and mark the outline on the edge of the door
- Cut away the timber to allow the latch bolt assembly and rebate block to fit flush with the leading edge of the floor
- Fix latch bolt assembly with 8g x 38mm screws supplied. Drill 3mm diameter pilot holes to suit

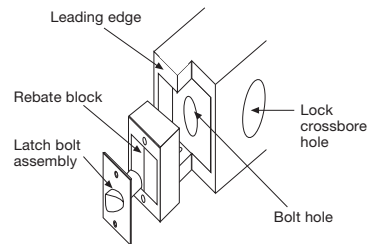

Components

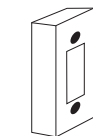

Rebate Block



Strike Reinforcer



8g x 38mm Screw



6g x 25mm Screw