



WINDOW HANDLE FRONT FIXING

PROFESSIONAL SERIES

CONTENTS

- 1 x Wedgeless left-handed window handle
- 2 x Screws
- 1 x Installation instructions

TOOLS REQUIRED



Drill



3.5mm drill bit



#1 square screwdriver



Marker pen



Safety goggles



The world's favourite lock
www.yalelock.co.nz



MC331B Q25119 1117
9 414553 1033124

ASSA ABLOY New Zealand
6 Armstrong Road, Albany,
Auckland 0632, New Zealand

Quality, ISO 9001
Environmental, ISO 14001

For customer feedback:
nzsales@assaabloy.com

An ASSA ABLOY Group brand



PLEASE
RECYCLE

ASSA ABLOY

MC331B



WINDOW HANDLE FRONT FIXING

LEFT HANDED
HIGH PROFILE

PROFESSIONAL
SERIES

WEDGELESS

Suitable for aluminium



Suitable
for awning



Suitable
for casement



Easy
install



Instructions
included




Made in
New Zealand



Wedgeless Window Handle

Fixing Instructions


A Installing Face Fix Base and Sub Fix Base

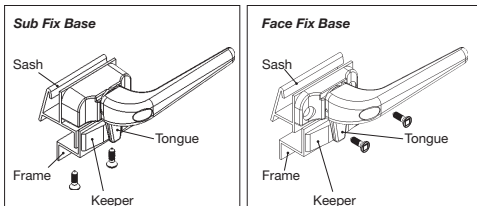

- 1A Remove existing handle** by unscrewing fixing screws or drilling out the head of the rivets if used
- 2A Fitting face fix and sub fix handles.** If the handle base has exactly the same hole centres, simply re-fit the new handle with screws provided. For sub fix base, refer to handy hints **Note: Rivets can be used if preferred**
- 3A Test operation** of handle and ensure that the tongue holds the window sash firmly against frame. This will ensure that the window is sealed


Installation Notes

- Ensure the location of the holes in the handle base matches your existing handle
- Before drilling any new holes check the **OFFSET*** to ensure correct replacement handle selection
- Replacement keepers are available in different thicknesses through your locksmith or hardware retailer
- The "marking gauge" should not be used as a drilling guide as plastic material will allow the drill to wander




B Replacing Vertical Fix Handle - Using Sub Fix Base

- 1B Remove plastic screw cover** to expose existing fixing screws and remove handle

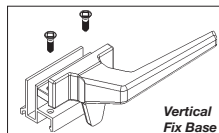


- 2B Locate the conical points** of the "marking gauge" provided in the existing holes ensuring that the arrows point to the glass. Mark the position for the new holes through the holes in the "marking gauge". Centre punch the new hole positions before drilling using a 3.5mm drill



Note: If the conical points of the "marking gauge" do not align with the existing screw holes, check the offset before drilling to determine correct hole centres

- 3B Fit vertical fix packer** to back of the sub fix handle base cavity. Fit new handle with screws provided, refer to handy hints

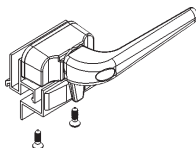

- 4B Test operation** of handle and ensure that the tongue holds the window sash firmly against the frame. This will ensure that the window is sealed

Handy Hints



The screw holes in sub fix handle mounting plates are not pre threaded and the screws provided are "thread cutting". To make installation easier, place the handle on a soft surface and apply a drop of oil or lubricant to the screw thread and drive the screw in and out to pre-cut the thread prior to installation.

10
YEAR
WARRANTY

The warranty covers manufacturing defects, standard finishes but excludes plated finishes or finishes exposed to a corrosive environment. The warranty excludes damage caused by installation contrary to written instructions and incidental or consequential damage. We recommend regular cleaning with mild detergent.