



Blind Nut Installation

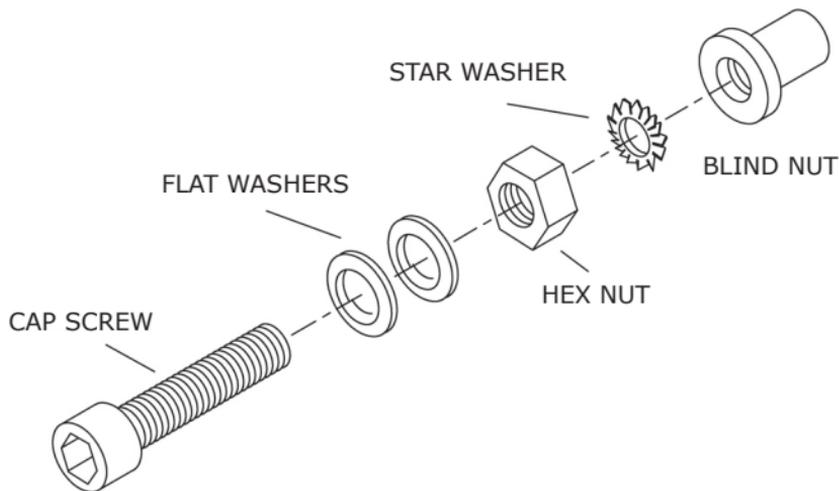


HOLD HEX NUT WITH
BOX WRENCH

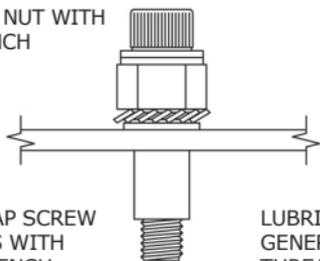

ROTATE CAP SCREW
3-4 TURNS WITH
ALLEN WRENCH

LUBRICATE THREADS
GENEROUSLY WITH
THREAD LOCK

STAR WASHER
PREVENTS BLIND
NUT FROM
SPINNING

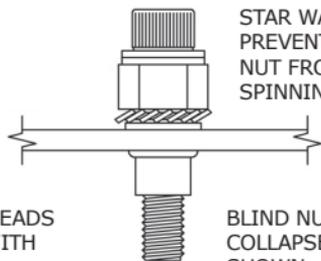

BLIND NUT WILL
COLLAPSE AS
SHOWN

SECURITRON™
ASSA ABLOY

1-800-MAGLOCK
www.securitron.com