


10 Year Mechanical Warranty



MK2 TASMAN HINGED SECURITY SCREEN DOOR LOCK


1. DOOR PREPARATION:

- At the desired lock height, both sides of the door stile must be cut out and drilled to the dimensions given here.

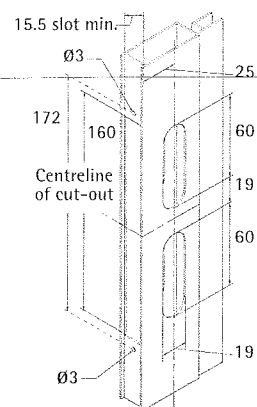

2. LOCK INSTALLATION:

- With the bolt to the top, insert lock body into the door cut-out. Secure with 2 12 mm fixing screws supplied.
- Ensure main bolt is fully extended and deadlocked before fitting lock cylinder.
- Position lock cylinder centrally in lock body so the cam turns toward the front edge of door. Secure with 32 mm retainer screw supplied. Do not over tighten
- Insert spindle into lock body.
- Select handle assembly with snib. Holding snib upright, and the handle horizontal, place assembly over the lock body on the inside of the door. Fit the other handle assembly and secure with 2 25 mm thread forming assembly screws supplied.

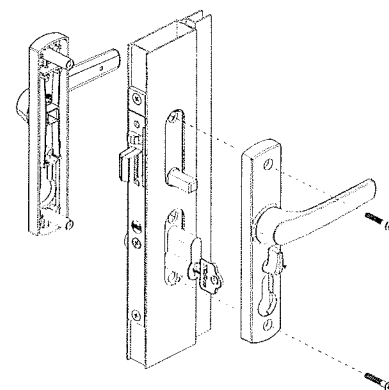

3. STRIKE INSTALLATION:

- With the door unlocked, hold in closed position and mark the door jamb level with the match mark on the front of the lock body.
- Position striker plate with top in line with mark just made. Mark screw holes and bolt recess position. Ensure the bolt recess for the lock main bolt is at least 20mm deep. Secure striker plate with 2 fixing screws supplied.

Pack Includes:

- Lock Body
- Spindle
- 2 Handle Assemblies
- Striker Plate
- Assembly & Fixing Screws

