

SYGAW2DP (White)
 SYGAB2DP (Black)
 SYGAS2DP (Silver)



Guardian Securistay

Safer window ventilation
 Suitable for aluminium



PROVIDES CHILD SAFETY



SUITABLE FOR AWNING



DETERS UNLAWFUL ENTRY



- 2 x Guardian Securistay
- 1 x Release tool
- 1 x Marking template
- 2 x Screw pack
- 4 x Packers and adaptors

Tools required

- Drill
- 3.2mm drill bit
- Phillips screwdriver
- Tape measure
- Marker pen
- Centre punch
- Safety goggles



Suitable for awning



Provides child safety



Deters unlawful entry



Easy install



Instructions included

Features

- Fully releasable and self re-engaging
- Does not protrude into blinds or curtains
- Safer window control in windy conditions

ASSA ABLOY New Zealand
 6 Armstrong Road, Albany,
 Auckland 0632, New Zealand
 Quality, ISO 9001
 Environmental, ISO 14001
 For customer feedback:
 nzsales@assaabloy.com
 yalehome.com/nz

SYGA
 Q25048_1122






Guardian Securistay

For Safer Window Ventilation

Application: Allows safer ventilation when house is occupied.
Operation: Restricts window opening. Arm can be disengaged (only when window is closed) to allow wider window opening. When installed correctly, arm re-engages automatically when window is closed.

Components

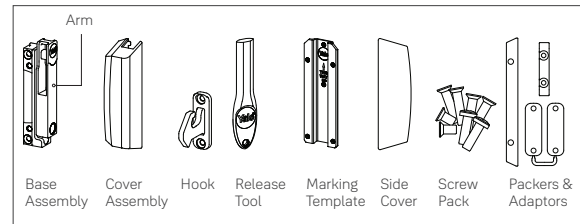

Fixing Instructions

1 Determine window offset. (Distance between frame and sash)

Refer to packer and screw selection chart overleaf to determine a flush fix, standard or side fix installation.

Select appropriate screws and packers.

NB: Care should be taken when drilling holes to avoid making contact with glass

Part of ASSA ABLOY

2 Determine Guardian install height. Measure window height and find appropriate install height using chart below. Mark height on window.

Window Height	Install Height
<600mm	200mm
600mm - 800mm	300mm
>800mm	400mm

3 For side fix applications only Attach side fix adapter to sash.

- Align the top edge of the adaptor with the install height on the window
- Mark and centre punch holes
- Hole pitch 25mm, 4mm centres from front sash edge
- Drill 2 x 3.2mm holes

Left hand installation shown for all steps

Attach adaptor using 2 x 21mm screws.

4 Drilling Guardian hole positions.

- Align top of template with install height mark
- Mark and centre punch holes in frame and sash (or side fix adaptor in side fix applications)
- Drill 2 x 3.2mm frame holes
- Drill 2 x 3.2mm sash holes

Template can be used for both left and right sides of windows.

Use hook packers behind template to straighten if necessary

5 Attach hook to sash.

- See packer and screw selection chart
- Attach hook to sash using appropriate screws and packers

6 Attach base to frame.

- See packer and screw selection chart
- Hang arm over hook as shown
- Attach base to frame using appropriate screws

7 Clip cover on to base.

- Cycle the window open and shut to check operation
- Open the window to maximum restricted position
- Line up the cover and base as shown and clip on the cover assembly. Push cover firmly to clip in place.

8 In situations where the back of the restrictor is visible, press the side cover on to the cover assembly.

Releasing Restriction

With the window fully closed, insert the release tool into the slot at the bottom of the Guardian Securistay and push firmly until the arm clips up in place.

The window can now be opened un-restricted.

Closing the window automatically re-engages the Guardian Securistay.

Removing Cover

VIEW FROM OUTSIDE

Care must be taken when removing the cover

- Release the restriction as above and fully open window to allow access to back of Guardian.
- Use a small flathead screwdriver or similar tool to release the top plastic cover clip (see image) Gently remove the cover.

Packer and Screw Selection Chart

The optimum window off-set for Guardian Securistay is 6mm. Use the enclosed packers to achieve the optimum 6mm window off-set.

	Window off-set	Packer/s	Base Fixing Screw	Hook Fixing Screw
Flush fix	Flush (no off-set, refer to instructions online*)	Base packer 6mm Q60342	24mm base screw	9mm hook screw
	5mm to 7mm	No packers required	18mm base screw	9mm hook screw
Standard Application	8mm to 10mm	Hook packers 1mm and 2mm stackable Q60341	18mm base screw	9mm hook screw
	Side fix (off-set of 15mm or more)	Hook side fix packer Q60345 (Hook packers 1mm and 2mm stackable Q60341 can also be used with the side fix packer to pack out hook)	18mm base screw	21mm side fix screw (side fixing packer to window sash), 12mm hook screw (fixing hook to packer)

* For flush fix installation instruction please visit www.yalehome.com/nz

Scan QR Code to view the installation video

