

LOCKWOOD SYNERGY™ SERIES REFERENCE CHART



ASSA ABLOY

3570 Nightlatches

Exit Door Latch 3570 - T

OUTSIDE
INSIDE opened by thumbturn

Adaptor SP3570-5050

1807/1906 2807/2906

20007NN/20106NN 20207NN/20306NN

20007NN/20127NN 20207NN/20327NN

Cylinder Latch 3570X

OUTSIDE opened by key
INSIDE

Cam X

1800/1907 2800/2907

20000NA/20107NN 20200NA/20307NN

20025NA/20107NN 20225NA/20307NN

Nightlatch 3570XT

OUTSIDE opened by key
INSIDE opened by turn

Cam X

Adaptor SP3570-5050

1800/1906 2800/2906

20000NA/20106NN 20200NA/20306NN

20025NA/20127NN 20225NA/20327NN

Communicating Door Latch 3570XX

OUTSIDE opened by key
INSIDE opened by key

Cam X

1800/1900 2800/2900

20000NA/20100NA 20200NA/20300NA

20025NA/20125NA 20225NA/20325NA

Square plate furniture is handed and non-reversible

3571 Deadlocks

Exit Deadlock 3571 - T

OUTSIDE
INSIDE opened by turn

Adaptor SP3571-5050

1807/1906 2807/2906

20007NN/20106NN 20207NN/20306NN

20007NN/20127NN 20207NN/20327NN

Lock-up Shop Deadlock 3571Y

OUTSIDE opened by key
INSIDE

Cam Y

1800/1907 2800/2907

20000NA/20107NN 20200NA/20307NN

20025NA/20107NN 20225NA/20307NN

Entry Deadlock 3571WT

OUTSIDE opened by key
INSIDE opened by turn

Cam W

Adaptor SP3571-5050

1800/1906 2800/2906

20000NA/20106NN 20200NA/20306NN

20025NA/20127NN 20225NA/20327NN

Glass Door Deadlock 3571YY

OUTSIDE opened by key
INSIDE opened by key

Cam Y

1800/1900 2800/2900

20000NA/20100NA 20200NA/20300NA

20025NA/20125NA 20225NA/20325NA

Square plate furniture is handed and non-reversible

3573 Sliding Door Deadlocks

Exit Sliding Door Deadlock 3573 - T

OUTSIDE
INSIDE opened by turn

Adaptor SP3571-5050

1807/1906 2807/2906

20007NN/20106NN 20207NN/20306NN

Lock-up Shop Sliding Door Deadlock 3573Y

OUTSIDE opened by key
INSIDE

Cam Y

1800/1907 2800/2907

20000NA/20107NN 20200NA/20307NN

Sliding Door Deadlock 3570WT

OUTSIDE opened by key
INSIDE opened by turn

Cam W

Adaptor SP3571-5050

1800/1906 2800/2906

20000NA/20106NN 20200NA/20306NN

Sliding Glass Door Deadlock 3573YY

OUTSIDE opened by key
INSIDE opened by key

Cam Y

1800/1900 2800/2900

20000NA/20100NA 20200NA/20300NA

3572 Vestibule Locks

Exit Latch 3572 -

OUTSIDE handle always rigid
INSIDE handle always operative

1805/1905 2805/2905

20005NN/20105NN 20205NN/20305NN

Exterior & Exit Lock 3572 - T

OUTSIDE operative except when locked by inside turn
INSIDE turn locks and unlocks outside handle. Inside handle always operative

Adaptor SP3572-5250

1805/1904 2805/2904

20005NN/20104NN 20205NN/20304NN

Single Action Lock 3572X

OUTSIDE key retracts latch
INSIDE handle always operative

Cam X

1800/1905 2800/2905

20000NA/20105NN 20200NA/20305NN

Storeroom Lock 3572X

OUTSIDE key retracts latch. Handle always rigid
INSIDE handle always operative

Cam X

1801/1905 2801/2905

20001NA/20105NN 20201NA/20305NN

Exterior & Exit Lock 3572 - Z

OUTSIDE operative except when locked by inside key
INSIDE key locks and unlocks outside handle. Inside handle always operative

Cam Z

1805/1901 2805/2901

20005NN/20101NA 20205NN/20301NA

Classroom Lock 3572Z

OUTSIDE key locks and unlocks outside handle. Operative except when locked by inside key
INSIDE handle always operative

Cam Z

1801/1905 2801/2905

20001NA/20105NN 20201NA/20305NN

Classroom Lock 3572M

OUTSIDE key locks and unlocks outside handle. Operative except when locked by outside key
INSIDE handle always operative

Adaptor SP3572-5350RH SP3572-5450LH

Cam M

1801/1905 2801/2905

20001NA/20105NN 20201NA/20305NN

Vestibule Lock - Ani Lockout 3572WA

OUTSIDE key locks and unlocks outside handle. Operative except when locked by inside turn or outside key
INSIDE turn locks and unlocks outside handle. Inside handle always operative

Adaptor LP3572-5250

Cam W

1801/1904 2801/2904

20001NA/20104NN 20201NA/20304NN

Vestibule Lock 3572XT

OUTSIDE key retracts latch. Operative except when locked by inside turn
INSIDE turn locks and unlocks outside handle. Inside handle always operative

Adaptor SP3572-5250

Cam X

1801/1904 2801/2904

20001NA/20104NN 20201NA/20304NN

Exterior & Exit 3572XZ

OUTSIDE key retracts latch. Operative except when locked by inside key
INSIDE turn locks and unlocks outside handle. Inside handle always operative

Cam X

Cam Z

1801/1901 2801/2901

20001NA/20101NA 20201NA/20301NA

Anti Lockout Lock 3572XA

OUTSIDE key locks and unlocks outside handle. Operative except when locked by inside turn or outside key
INSIDE turn locks and unlocks outside handle. Inside handle always operative

Adaptor LP3572-5250

Cam X

1801/1904 2801/2904

20001NA/20104NA 20201NA/20304NA

Closing door or operating inside handle will unlock the mechanism and make the outside handle operative.

Reverse turn of the key retracts latch. Lock cannot be made up from standard 3572 Primary lock

Dual Entry Deadlatch 3577X

OUTSIDE opened by key. Cylinders are keyed to differ
INSIDE opened by handle at all times

1810/1905 2810/2905

20010NA/20105NA 20210NA/20305NA

Square plate furniture is handed and non-reversible

Combination Latches

3574 Combination Latches

Passage Latch 3574 -

OUTSIDE handle always operative
INSIDE handle always operative

1805/1905 2805/2905

20005NN/20105NN 20205NN/20305NN

Exterior Privacy Latch 3574T

OUTSIDE operative except when locked by inside turn
INSIDE turn locks and unlocks outside handle. Inside handle always operative

Adaptor SP3572-5250

1805/1904 2805/2904

20005NN/20104NN 20205NN/20304NN

Privacy Latch 3574ET

OUTSIDE emergency button unlocks both handles. Operative except when locked by inside turn
INSIDE turn locks and unlocks outside handle. Inside handle always operative

Adaptor SP3572-5250

1814/1904 2814/2904

20014NN/20104NN 20214NN/20304NN

Exterior Lock 3574 - Z

OUTSIDE operative except when locked by inside key
INSIDE key locks and unlocks both handles. Operative except when locked by inside key

1805/1901 2805/2901

20005NN/20101NA 20205NN/20301NA

Glass Door Lock 3574Z

OUTSIDE key locks and unlocks both handles. Operative except when locked by outside key
INSIDE operative except when locked by outside key

Cam Z

1801/1905 2801/2905

20001NA/20105NN 20201NA/20305NN

Office Lock 3574WT

OUTSIDE key locks and unlocks both handles. Operative except when locked by inside turn or outside key
INSIDE turn locks and unlocks outside handles. Operative except when locked by inside turn or outside key

Adaptor SP3572-5250

Cam W

1801/1904 2801/2904

20001NA/20104NN 20201NA/20304NN

Glass door Lock 3574ZZ

OUTSIDE key locks and unlocks both handles. Operative except when locked by either key
INSIDE key locks and unlocks both handles. Operative except when locked by either key

Cam Z

Cam Z

1801/1901 2801/2901

20001NA/20101NA 20201NA/20301NA

Glass door Lock 3574XZ

OUTSIDE key retracts latch. Operative except when locked by inside key
INSIDE key locks and unlocks both handles. Operative except when locked by inside key

Cam X

Cam Z


1801/1901 2801/2901

20001NA/20101NA 20201NA/20301NA

FUNCTIONING MATRIX

Sample part number 3574WTRSCAF is made up of seven elements.

The description of this part number is an office locking combination latch with cylinder and turn, right handing, satin chrome brushed, for aluminium fix. Choose your product by selecting an option from each element.

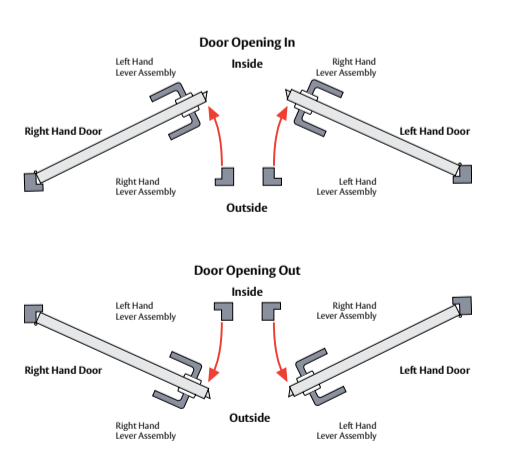

Backset	Platform	Function	Sub Function	Handing	Finish	Options
3	57	4	WT	R	SC	AF
Backset		Sub Functions		Handing		Options
60mm	3	e.g.Outside	Inside	Right Handed	R	Aluminium Fix AF
89mm	4	W	T	Left handed	L	Latching strike LS
127mm	5	Locking Cylinder with W Cam	W			
Platform		Finish		Options		
Standard (Intruder Resistant)	57	Latching Cylinder with X Cam	X	Chrome Plate	CP	
SECC Secure Area*	579	Latching Cylinder with Y Cam	Y	Satin Chrome Brushed	SC	
Functions		Handing		Options		
Nightlatch	0	Latching Cylinder with Z Cam	Z	Polished Brass	PB	
Deadlock	1	Latching Cylinder with M Cam	M			
Vestibule Lock	2	Latching Cylinder with E Button	E			
Sliding Door Lock	3	No Sub Function	-			
Combination Lock	4	Antilockout	A			
Dual Entry Lock	7					
Hold back Lock	8					

Lever Options for Artefact and Brass Door Furniture

Tier 1

Lever - 70, Lever - 76, Lever - 77, Tenor - 79, Lever - 83, Lever - 85, Lever - 90, Lever - 97, Knob - 20

Tier 2

Lever - 32, Intermezzo - 41, Arpeggio - 44, Sonata - 45, Veloce - 53, Lever - 55, Lever - 55A, Overture - 59, Lever - 60, Soprano - 61, Lever - 65, Lever - 66, Lever - 67, Tempo - 71, Ving - 74, Cadenza - 78, Lever - 798, Lever - 80, Lever - 92

Obsolete Knobs / Levers: 00, 39, 40, 43, 48, 50, 54, 57, 62, 69, 72, 73, 87, 91, 94

Single/Double Cylinder Assemblies

"X" Cam - 570-2, "Y" Cam - 571-2, "Z" Cam - 572-2, "W" Cam - 575-2, "M" Cam - 575-52, "X" Cams - 570-701, "Y" Cams - 571-701, "X" and "Z" Cams - 574-701, "Z" Cams - 575-701

Adaptors

SP3570-5050 Nightlatch Turn Adaptor, SP3570-6050 Nightlatch Turn Adaptor (for Case Fix Turns), SP3571-5050 Deadlock Turn Adaptor, SP3571-6050 Deadlock Turn Adaptor (for Case Fix Turns), SP3572-5250 Standard Turn Adaptor, SP3572-6250 Standard Turn Adaptor (for Case Fix Turns), SP3572-5350 (RH) Anti-Vandal Turn Adaptor, SP3572-5450 (LH) Anti-Vandal Turn Adaptor