



## GUARDIAN SECURISTAY SAFER WINDOW VENTILATION

PROFESSIONAL SERIES

### TOOLS REQUIRED

- Drill
- Tape measure
- Safety goggles
- 3.2mm drill bit
- Marker pen
- Phillips screwdriver
- Centre punch

### CONTENTS

1 x Guardian  
Securistay  
1x Release  
tool  
1 x Marking  
template  
1 x Screw  
pack  
2 x Packers  
and adaptors

### FEATURES

Fully  
releasable  
and self  
re-engaging

Does not  
protrude into  
blinds or  
curtains

Safer window  
control  
in windy  
conditions

ASSA ABLOY  
New Zealand  
6 Armstrong Road,  
Albany,  
Auckland 0632,  
New Zealand

Quality, ISO 9001  
Environmental, ISO  
14001

For customer feedback:  
nzsales@assaabloy.com



The world's favourite lock  
[www.yalelock.co.nz](http://www.yalelock.co.nz)

An ASSA ABLOY Group brand

**ASSA ABLOY**

SYGTWDP



## GUARDIAN SECURISTAY

SAFER WINDOW  
VENTILATION

### SAFER VENTILATION

Suitable for timber



Suitable  
for awning



Provides  
child safety



Deters  
unlawful entry



Easy  
install



Instructions  
included



Made in  
New Zealand




## Guardian Securistay For Safer Window Ventilation

**Application:** Allows safer ventilation when house is occupied.

**Operation:** Restricts window opening. Arm can be disengaged (only when window is closed) to allow wider window opening. When installed correctly, arm re-engages automatically when window is closed.


### Components

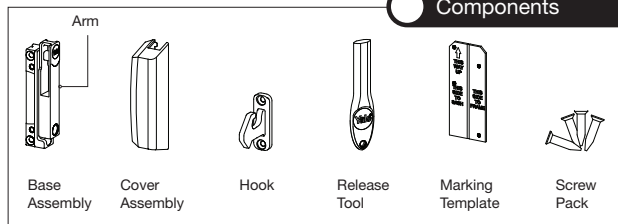

### Fixing Instructions


- 1** Determine Guardian install height.  
Measure window height and find appropriate install height using chart below. Mark height on window.

Window Height	Install Height
<600mm	200mm
600mm - 800mm	300mm
>800mm	400mm

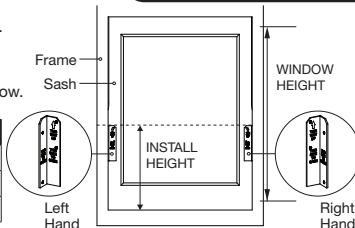

- 2** Drilling Guardian hole positions.
- Align top of template with install height mark
  - Mark and centre punch holes in frame and sash
  - Drill 2 x 3.2mm frame holes
  - Drill 2 x 3.2mm sash holes

Template can be used for both left and right sides of windows.

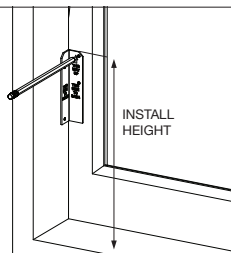


An ASSA ABLOY Group brand

Follow this link to view the installation video or go to [www.yalelock.co.nz/guardian](http://www.yalelock.co.nz/guardian)




### Fixing Instructions

- 3** Attach hook to sash.
- Attach hook to sash using 2 x screws provided

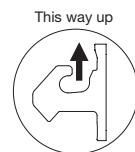


- 4** Attach base to frame.
- Open window slightly and hang arm over hook as shown
  - Attach base to frame using 2 x screws provided

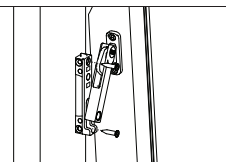

- 5** Clip cover on to base.
- Cycle the window open and shut to check operation
  - Open the window to maximum restricted position
  - Line up the cover and base as shown and clip on the cover assembly. Push cover firmly to clip in place




### Releasing Restriction

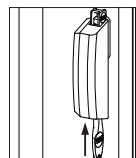

With the window fully closed, insert the release tool into the slot at the bottom of the Guardian Securistay and push firmly until the arm clips up in place. The window can now be opened un-restricted.  
Closing the window automatically re-engages the Guardian Securistay.

### Removing Cover

VIEW FROM OUTSIDE



#### Care must be taken when removing the cover

- Release the restriction as above and fully open window to allow access to back of Guardian.
- Use a small flathead screwdriver or similar tool to release the top plastic cover clip (see image) Gently remove the cover.

ASSA ABLOY